




## FILTER CARTRIDGE REPLACEMENT INSTRUCTIONS FOR MODEL JWF

1. Before beginning remove blue cap from top of cartridge.
2. Turn off water to the unit at the stop tap **(1)** duo valve or **(1a)** or shut off ball valve **(1b)**.
3. Turn on water tap **(2)** to release pressure on system. Once all water is expelled from tap, turn off.
4. Bracing the filter head **(3)**, unscrew the old cartridge **(4)** from head with a half turn to the left and pull filter down/away from the head.
5. Bracing the filter head push new filter into it and turn a half turn to the right until the filter can no longer turn.
  - Note: The filter can only go into the filter head one way – with the label facing the inlet **(5)**.
6. Turn on water tap **(2)** and turn stop valve **(1)** duo valve **(1a)** or shut off ball valve **(1b)** back on.
7. Let water run through for approximately 2- 3 minutes. The system is now ready to use.
  - Note: If the water appears cloudy you may have air in the pipe which will clear.

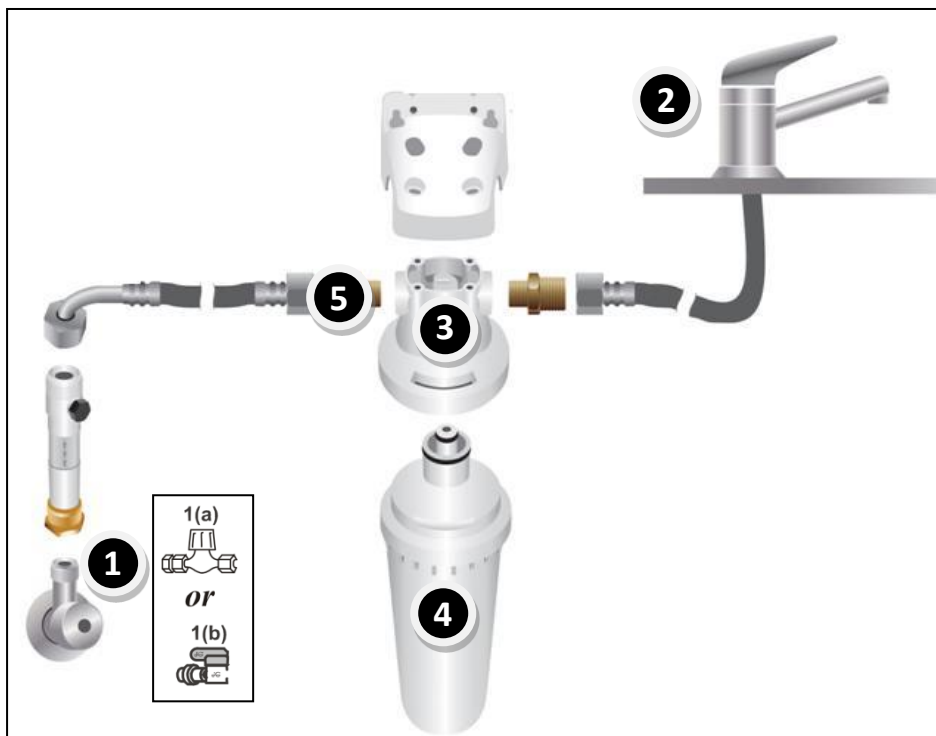

**Cartridges should be replaced every 12 months  
with the manufacturer's recommended filter**

**Just Water's Customer Service Team will send you  
a reminder when your next filter change is due**

**For assistance call 0800 366 663 or e-mail [jwf@justwaterfilters.co.nz](mailto:jwf@justwaterfilters.co.nz)**